


## R207.1 Mode Spring Autostop Roller Blind


How to set the Autostop feature

ONE

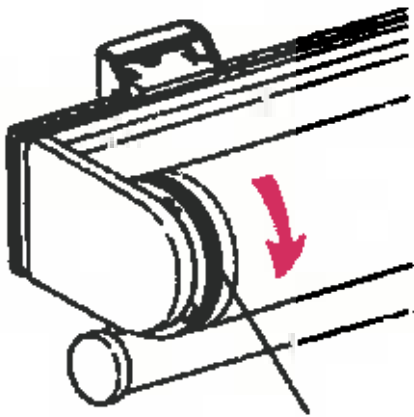


Turn the dial in the direction indicated above. This will release the roller lock.

TWO

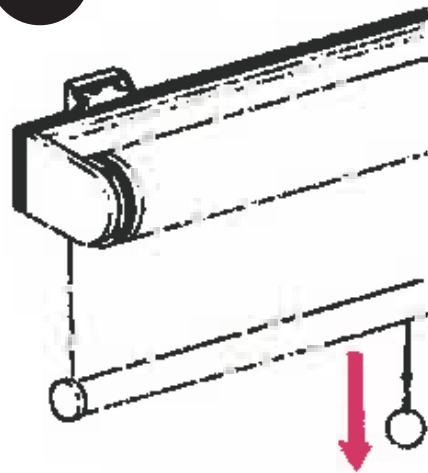


Pull down the blind to the desired stop position.

THREE

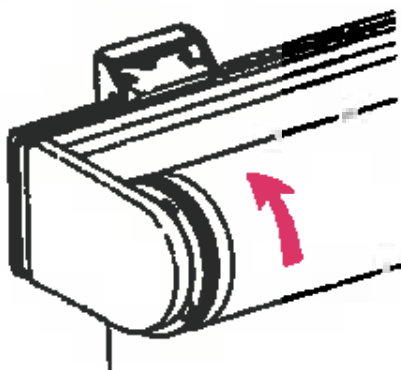

Turn the dial in the direction indicated, so the Autostop will lock back into place.

FOUR

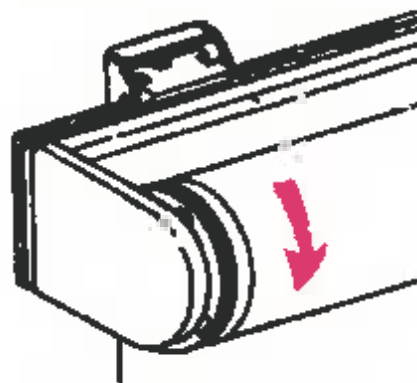

Return the dial to its original position, so the pre-set stopper will be released. Repeat 1, 2 and 3 again.